



A. If teleflex cable can be removed

Removal

- 1 Remove sun roof lid headliner.
- 2 Unscrew connecting plate on front roof frame and press off connecting clamp on cable.
- 3 Run teleflex cable forward until it is no longer inserted in gears of sun roof motor.

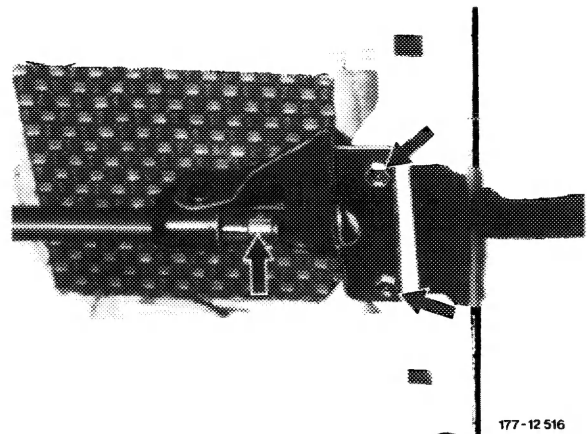


- 4 Remove cover in trunk on left hand side (68—480).
- 5 Disconnect electric wires at sun roof motor.

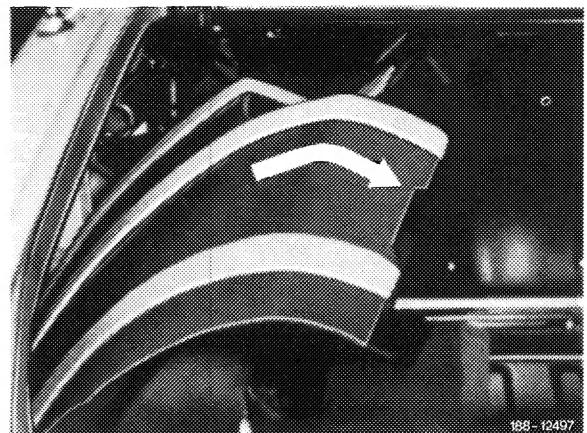

- 6 Remove holder mounting screws.
- 7 Detach teleflex tube as well as extension tube at gears.
- 8 Remove holder with motor and gears.

Installation

- 9 Install in reverse sequence.

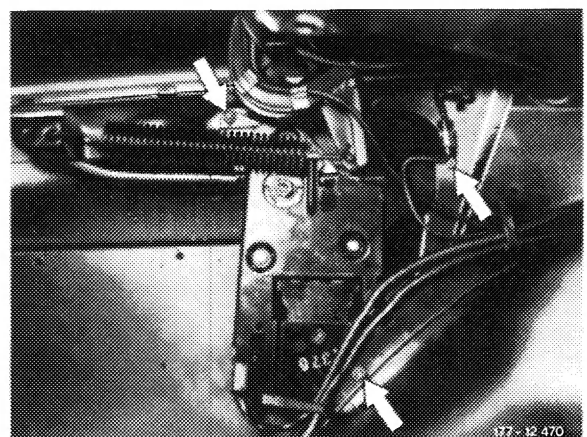


B. If teleflex cable cannot be removed

Note


If the teleflex cable is stuck, the drive gears must be dismantled.

Removal


- 1 Remove cover in trunk on left hand side (68—480).

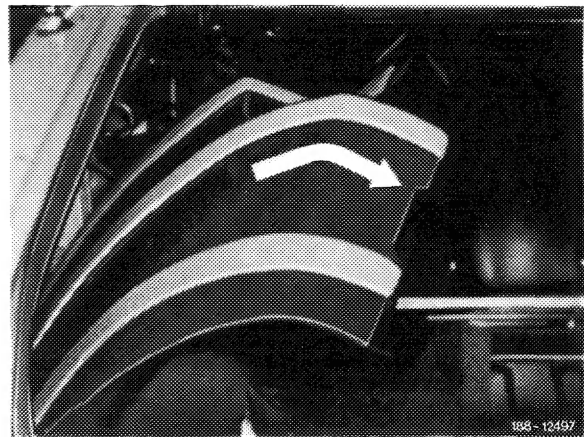


- 2 Bend open lock plate of counternut on gears and unscrew counternut.

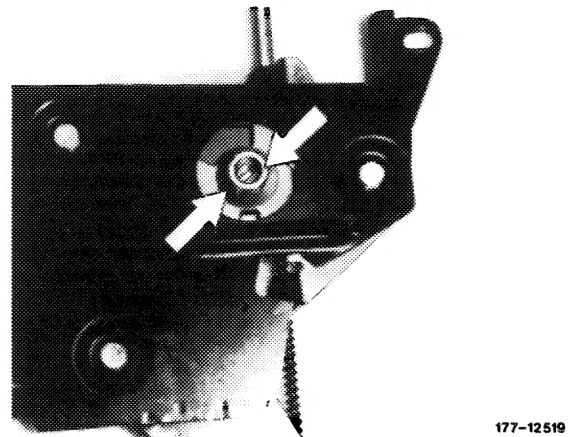


- 3 Remove holder mounting screws.

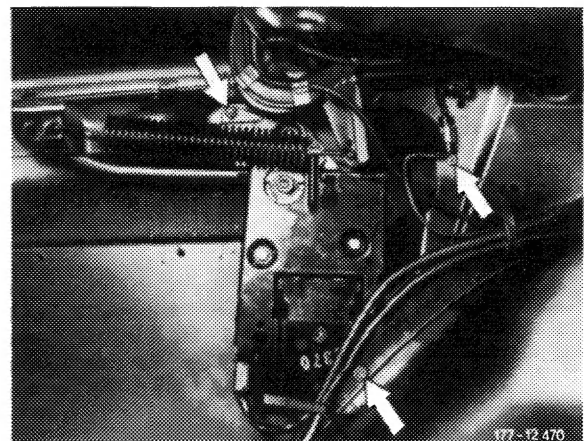

- 4 Turn holder somewhat and unscrew cover on back side of transmission case.

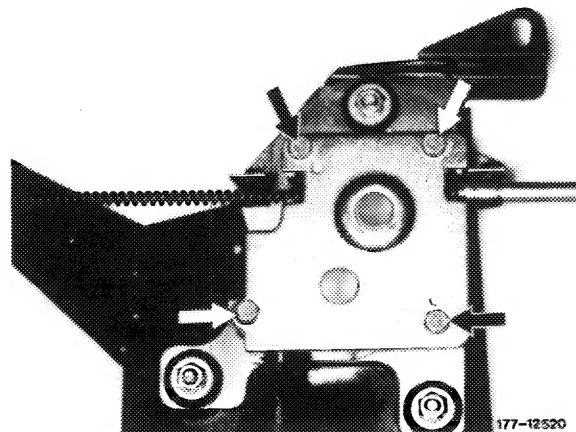

- 5 Remove transmission cover and take out large gear wheel along with input shaft.
- 6 Detach teleflex tube and extension tube at gears.
- 7 Take teleflex cable out of gears.
- 8 Remove holder with motor and gears.

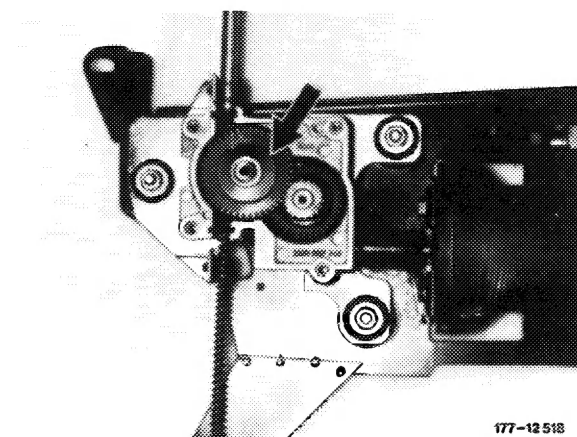

Installation

- 9 Assemble gears.
- 10 Install holder with motor and gears.
- 11 Continue installation in reverse sequence of removal.
- 12 Adjust slip clutch of gears (77-190).